


PANEL CONNECTION INTERIOR CORNER BEARING

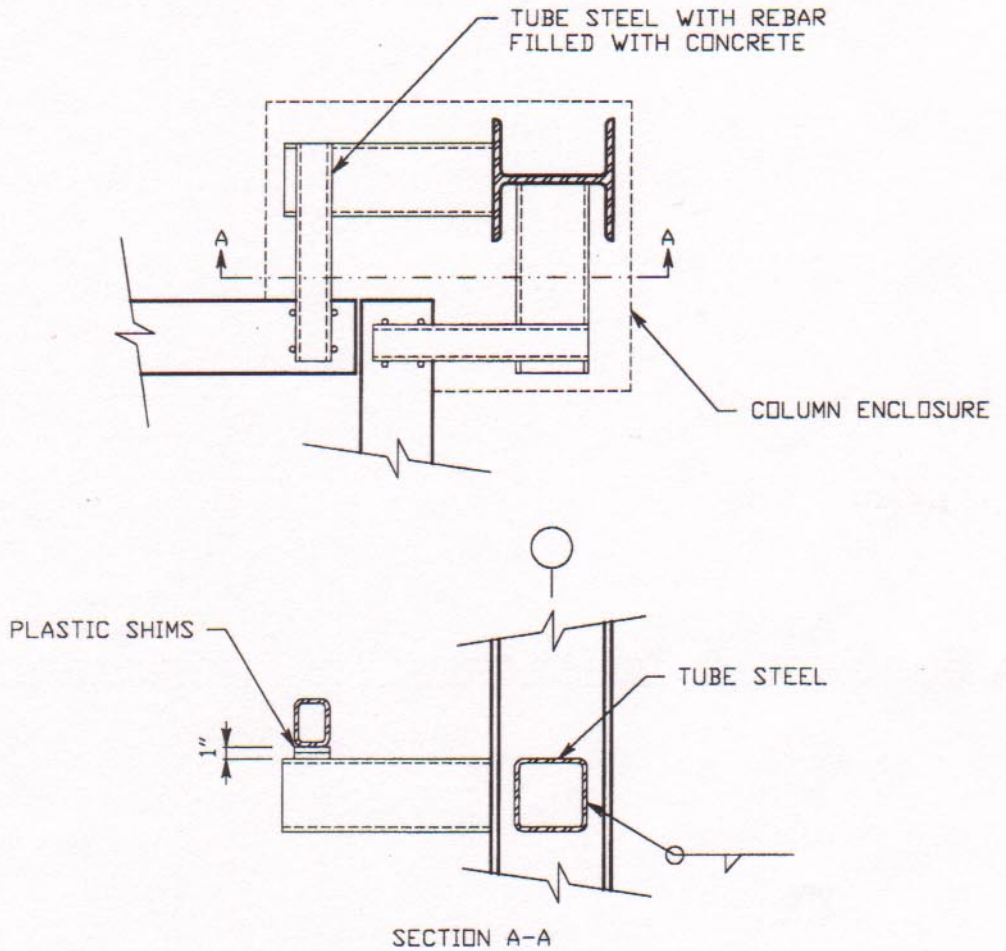

NOTE: THE ENGINEER OF RECORD SHALL CHECK THE COLUMN FOR LOCALIZED BUCKLING